


Installation Manual

Home Floor Hatch **HDIK(K)** model

1. Fitted Diagram

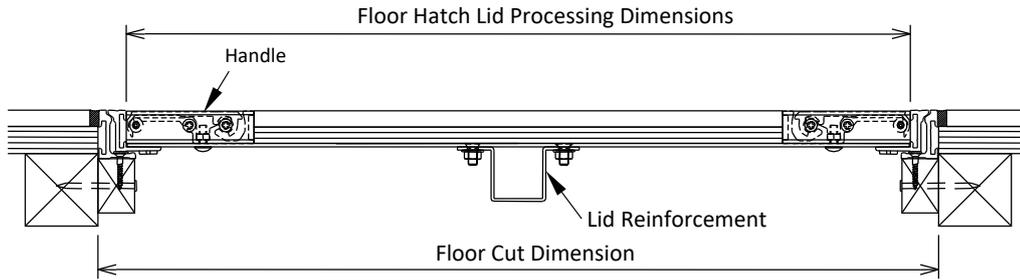


■ Accessory Details

Accessories	Qty	
	46	60
Wood Screw (3.1 x 20)	8	8
Tapping Screw (4 x 10)	14	20
Lock *	2	4

*K model only (with key)

2. Floor Framing

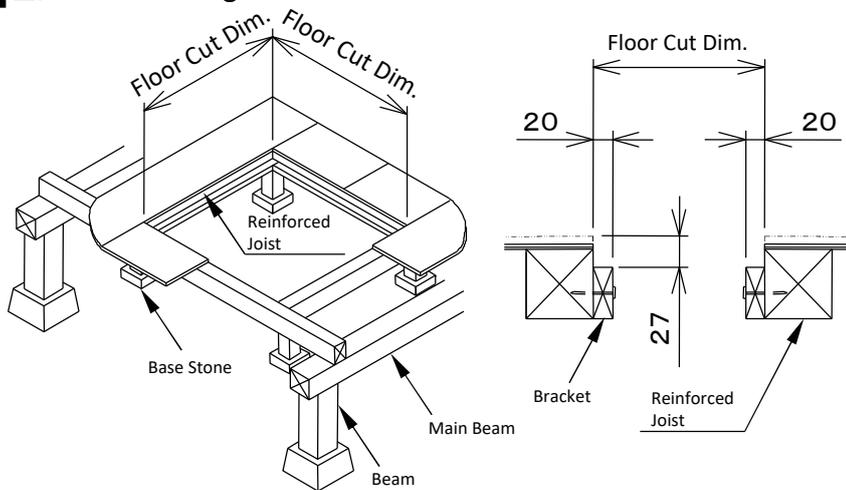


1. Cut the floor opening according to the floor cut dimension, and then attach the reinforced joint all around beneath the floor.

Model	Floor Cut Dim.
HDIK46(K)	461 × 461
HDIK60(K)	606 × 606

2. Attach the bracket 27mm below the finished tile surface.

- ⚠ **Secure the floor strength by base stones**
- ⚠ **If renovating, be careful of the pipes underneath.**

3. Base Material Processing · Attachment

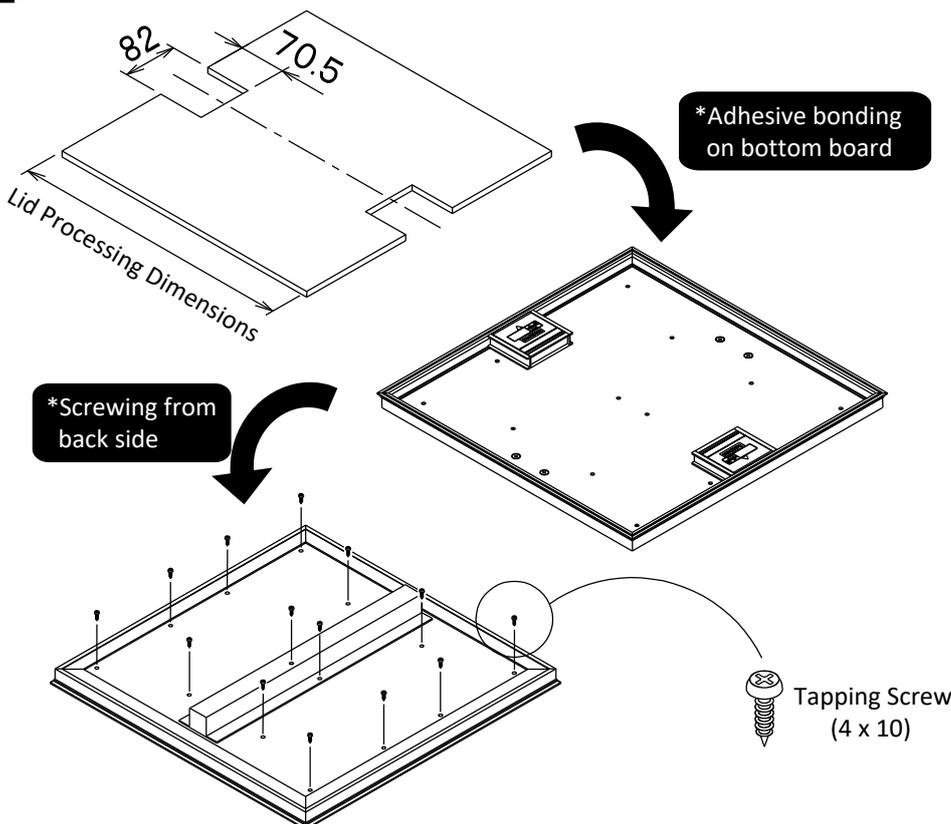


1. Cut the base materials according to the lid dimension and handle part (82 x 70.5) for each central part.

Model	Lid Dimension (mm)
HDIK46(K)	429 × 429
HDIK60(K)	276 × 574

2. After adhesive bonding on the bottom, fix it with tapping screw(4 x 10).


- ⚠ **The total thickness of the base materials and tile shall be 18mm.**

4. Outer Frame Mount

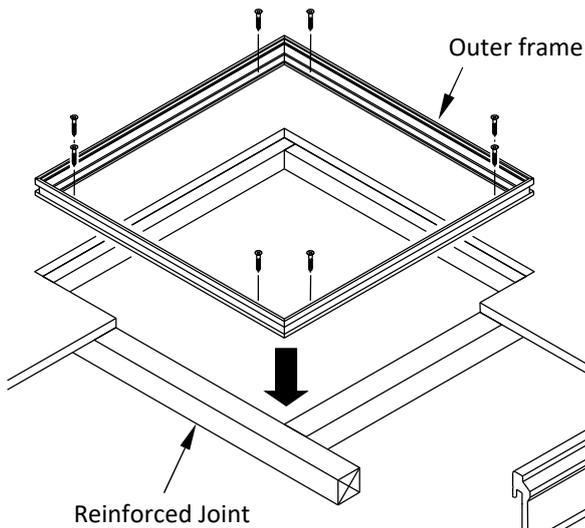


1. Mount the outer frame in floor cut space
2. Screw the outer frame and bracket with wood screw securely, paying attention to the gap between them.

⚠ Outer frame allowable angle within 1mm

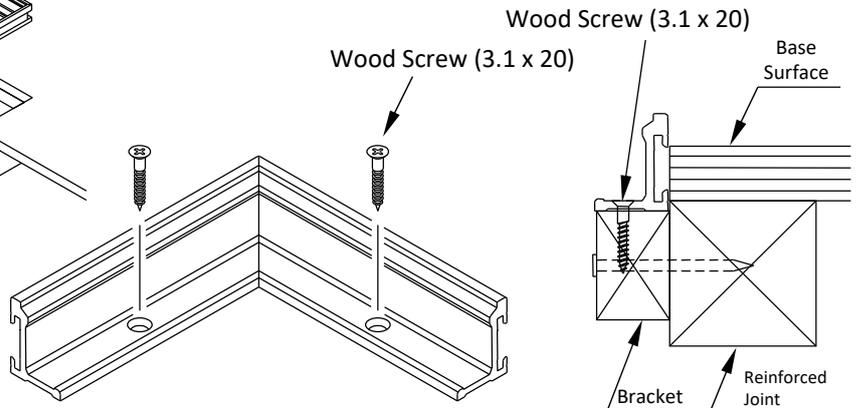


5. Floor Tile Finish

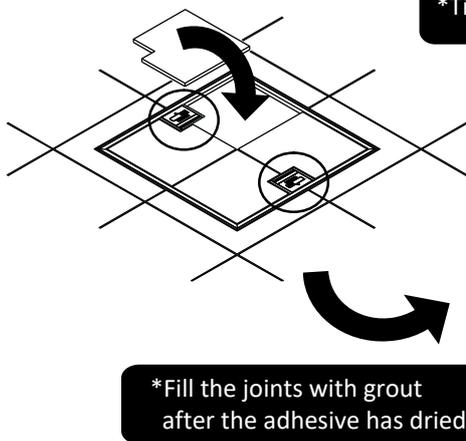

1. Cut the tile according to the outer frame and inner lid.
- ⚠ If K model(with key), align the hole for the outer frame lock receiver with the orientation of the inner lid handle.
2. Adhere the cut tile on base material.
3. After the adhesive dried enough and no gap between tiles, fill the joints with grout.

6. How to use handle

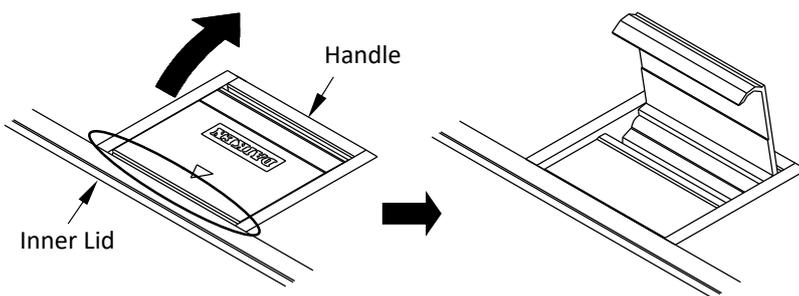

1. Put your finger inside the inner lid and lift up

⚠ Be sure to close the handle after use
⚠ Use a flathead screwdriver if lifting up the handle is stuck.
Be careful not to scratch the surface during operation